

# HD COAXIAL CAMERA TESTER 4.3 "SCREEN



## 1. general

The new HD coaxial camera tester is developed for HD coaxial camera installation and maintenance site, with TVI, AHD, CVBS and CVI, it also provides many useful functions, such as video display, PTZ control by coaxial and by (RS485 ), DC12V output power for powering a camera, audio test, LED lamp, etc.

### Product features

- Coaxial camera test
- PTZ control over coaxial



- PTZ control by RS485



The tester incorporates the Pelco-D, / P etc. PTZ control protocol through its own RS485 interface.

To control the camera we use the direction arrows located on one side of the RS485 port, for zoom we use the Zoom + and Zoom - arrows located on one side of the coaxial audio input.

- Output voltage DC12V

Power the camera with a tester output power of DC12V. It is useful for when the power supply is not available, even to rule out camera power problems.



- Audio test



- CVBS camera test
- TVI camera test
- AHD camera test
- CVI camera test

To select the type of test, it is necessary to press the Menu button several times until reaching the MODE option. To change the mode, press the Zoom + and Zoom - buttons.

- Improved UTP test

To do this we connect the network cable to the RJ45 port of the tester and at the other end we connect the included RJ45 tester, then we press the Menu button several times until we reach the network cable test option (Net cable test) below the 8 will appear. Threads numbered from 1 to 8 with a V in case of good and with an X in case of bad.



- LED lamp

It is useful to keep the safety of the engineer in the facilities at night, the on / off button is easy to operate.

- Graphical battery indicator

